

# TRANSMITTER chart

## Remote Chart

## Compatibility with the following Model

## Casing Part Number (Membrane included)



**611-TX**

801 and RS-611

611-C



**711-TX**

RS-711XR, 701XR 2101XR

711-C



**613-TX**

903, 803, 803M, RS-613  
RS-623 companion remote

613-C



**623-TX**

RS-623

623-C



**2504-TX**

2504a, RSS-2504

2504-C



**2524-TX**

RSS-2524

2524-C



**5224-TX**

RSS-5224 (XRT technology)

5224-C



**310-052-144 \*\***

RS-101, RS-102, RS-103, RS-113, RS-213,  
PR/SU-2503, RS-203, RS-100 1BT,  
RS-100 3Btms, MV-801, and MV-802

310-052-057-01

310-052-053-00



**301-052-382 \*\***

502, 1003, 1004, PR/SU 1001, PR/SU 1003,  
PR/SU 1004

310-052-057-01

310-052-053-00



**310-052-300 (Green LED)**

1105, 2106XR, 3106, 3106M, RS-120,  
2006 (A&B) 3006, 3006a

310-052-060-03



**310-052-452 (Blue LED)**

4204, 5204, 2205, 5204M

310-052-060-03



**310-052-454 (Colored button)**

4204, 5204, 2205, 5204M

310-052-068



**310-052-396 (Gray button)**

2205a, 4204a

310-052-068-20



**310-052-451 (Colored button)**

4204, 5204, 2205, 5204M

310-052-064-10



**310-052-397 (Gray button)**

2205a, 4204a

310-052-064-20

\*\* to clearly identify the difference between the 315 MHz and the 372.5 MHz (since they both look alike), hold any button down for more than 3 seconds, the LED will stop flashing on the 315 MHz, but will continue to flash for the 372.5 MHz.